

Installing Your CableCard



1 Set up your retail host device according to the manufacturer's instructions that came with the device.

2 Record the two lines of alphanumeric characters that appear on the lower left corner of the CableCard. You may need this information later.

Line 1: _____

Line 2: _____



3 Refer to the instructions that came with your retail device. You may or may not need to power on the device to install the CableCard.

Locate the appropriate slot in which to insert the CableCard.

Follow the instructions that came with your retail host device to insert the CableCard into the slot until it is firmly seated.

⚠ CAUTION: Do not force the CableCard into the slot. Doing so may damage the CableCard or the host device.

4 Once the CableCard is properly installed, the CableCard ID and host device ID will automatically appear on the television screen. Record these IDs:

CableCard ID: _____

Host ID: _____

5 Contact OpenBand to complete your CableCard activation. Call OpenBand's 24-Hour Customer Support Center at: **(703) 961-1110**

An OpenBand representative will help you complete CableCard activation.

NOTE: If your host device requires two (2) CableCards, complete steps 1-5 for the first CableCard. Then, repeat steps 1-5 for the second CableCard.

Always refer to the documentation that came with your CableCard host device for instructions on operating that device.